

# PLEASE CAREFULLY READ THIS MANUAL AND KEEP IT IN A SAFE PLACE

## WARNING

- Must not be used by a young child (0-3 years).
- Children under three years of age must not use this product due to their inability to react in the event of overheating.
- The appliance can be used by children between 3 and 8 years of age under supervision and with the control always set to the minimum temperature.
- This product can be used by children aged eight or over and by persons with reduced physical, sensory or mental capacities or those lacking experience or knowledge, provided that they are properly supervised or the instructions for safe use of the product have been provided to them and the risks involved have been understood. Children must not play with the product. The product may not be cleaned or maintained by unsupervised children.
- This product must not be used by persons insensitive to heat or by other vulnerable persons incapable of reacting in the event of overheating.
- Frequently check the product for signs of wear and tear. If there are signs of wear and tear, if the product has been used in an abnormal way or if it is not working, return it to the supplier before turning it on again.
- This product is not intended for medical use in a hospital.

- Do not crease the product by placing objects on it during storage.
- Do not submerge the appliance, or expose it to water or any other liquid.
- Do not use while damp.
- Do not use the appliance with wet hands or feet.
- The appliance may only be used with the power supply provided.
- The appliance's cable and control unit can cause entanglement, strangulation, tripping, or trampling hazards if not properly routed. The user should ensure that any ties and excess electrical cords are securely arranged.
- When storing the product, allow it to cool down before folding it.
- When the product is not being used, store it away as instructed.
- Respect the cleaning instructions detailed below.
- Caution : the product is turned off by clicking once on the small button on the side of the main button.
- The appliance must not be cleaned or maintained by



Unsuitable for use by very young children (0-3 years)



Do not use it if creased or crumpled



Hand wash only



Do not use bleach



Do not tumble dry



Do not dry clean



Do not iron



Do not insert pins



Read the instructions

## KNOW HOW TO IDENTIFY THE SYMPTOMS OF HEAT STROKE

Depending on the conditions in which the heated jacket is used, you may become a victim of heatstroke. These are the symptoms of heatstroke:

• Extreme perspiration, clammy skin, pale or reddened skin, general weakness, dizziness, confusion, nausea, vomiting, headaches, cramps, fast and shallow breathing.

• If you notice any one of these symptoms, reduce the temperature of your body by sitting or lying down in a cool place, drinking sufficient amounts of cool water, using a fan and applying wet cloths to the skin to reduce the body's temperature.

**WARNING:** to avoid the possibility of heat stroke, disconnect the jacket if you are wearing it in an environment with a considerably higher temperature

• Do not place any explosive items (gas lighter, matches, etc.) in the pocket intended for the battery.

• Do not wear this jacket in a storm, rain or in a high pressure working environment.

• This jacket should not be worn by pregnant women, young children, physically impaired people, anyone insensitive to heat, or anyone with poor circulation.

• This jacket should not be worn by anyone suffering from a serious cardiovascular disease or who has a pacemaker. In case of doubt, please contact your attending physician.

• Do not use this product if it has any defect.

## CHARGER / BACK UP BATTERY 6000 mAh/ 5V

### SPECIFICATIONS:

 
TYPE OF BATTERY: LITHIUM POLYMER

INPUT: 5 V 2 A (MAX.)

CAPACITY: 6000 mAh/22.2 Wh

OUTPUT POWER: 10 W (MAX.)

When the product is fully charged through the adapter, it enters standby mode. Power consumption in standby mode: 0.12W. The period after which the equipment reaches automatically standby mode: <1 minute.

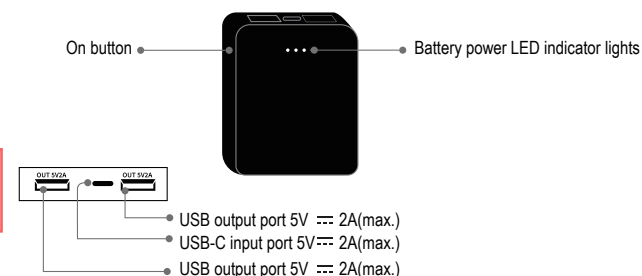

## INSTRUCTIONS FOR USE - QUICK START

- To fully charge the device, use the USB-C cable to charge the 6000 mAh/ 5V battery for approximately 4-4.5 hours or 8-9 hours depending on the charging method.

- The LED power supply indicator lights indicate the lifetime and charge status of the 6000 mAh/ 5V battery.

### LED POWER INDICATORS:

1 LED: 25% POWER

2 LEDs: 25-50% POWER

3 LEDs: 50-75% POWER

4 LEDs: 75-100% POWER

- The USB output ports of the 6000 mAh/ 5V battery allow you to charge and power more than one device at a time.

 
- To do so, switch on the 6000 mAh/ 5V battery and use the USB cable to connect and charge your USB devices.

- To power your heated jacket, connect the 6000 mAh/ 5V battery to the USB cable in the concealed pocket in your heated jacket. Refer to the button's manual for operation.

- While heating your heated jacket, use the other 5 V output port on the 6000 mAh/ 5V battery to simultaneously charge another USB device!


## CHARGE THE 6000 mAh/ 5V BATTERY

Use the USB-C cable supplied to plug the 6000 mAh/ 5V battery into a 5V=2A USB mains adapter (not supplied) or the USB port of a computer and charge it. Duration to fully charge: 4-4.5 hours (via the mains adapter) or 8-9 hours (via the computer).

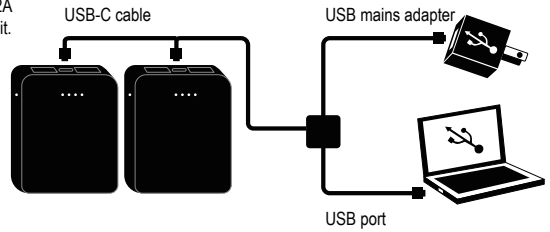

## CHARGE OTHER DEVICES

 
Connect the USB-C end cable to the USB port in the 6000 mAh/5V battery, then connect the USB-C end to your USB device. Switch on the 6000 mAh/ 5V battery to charge your device.

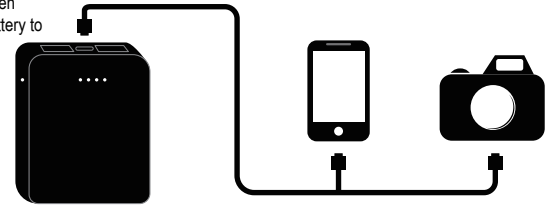

## CONNECT YOUR HEATED JACKET TO A POWER SUPPLY

To power your heated jacket, connect the 6000 mAh/ 5V battery to the USB cable in the concealed power pocket in your heated jacket. Refer to the button's manual for operation.

 LED temperature settings of the button on the front of the heated jacket:

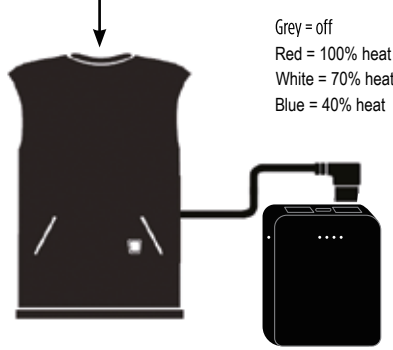

## USING THE HEATING FUNCTION

This jacket is fitted with a device to prevent accidental activation.

Click once on the small button to activate the heating function, a double beep is emitted and the button flashes red.

 
Click once on the flashing main button to activate the heating function, a beep will be heard and the button will turn solid red (maximum heating temperature).

Click successively on the main button to adjust the heating temperature, a beep will sound each time you press the button and the button will change from red (maximum heating) to white (medium heating) to blue (minimum heating), and so on.

Finally, click on the small button again to stop the heating function, a long beep is emitted and the button goes out.

## DOUBLE USE OF THE 6000 mAh / 5 V BATTERY

The USB output ports of the 6000 mAh/ 5V battery allow you to charge and power more than one device at a time. This means that you can simultaneously power your heated jacket while also charging your telephone for optimum convenience.

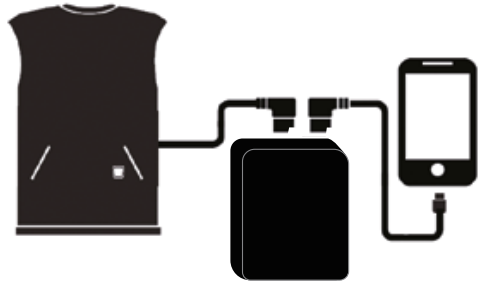

## CAUTION

1. Use with caution. Never use the product while sleeping or unconscious.
2. Do not allow the 6000 mAh/5V battery to enter into contact with water or other liquids. If water or other liquids penetrate the interior of the battery, immediately unplug the device from the battery. Continuing to use a potentially damaged product can lead to a fire or an electric shock.
3. Do not place this product near to a source of heat and do not expose the battery to a flame or direct source of heat, since this can cause an explosion.
4. Do not attempt to dismantle or modify the 6000 mAh/5V battery, the heated jacket or any part of these products.
5. Recycle the battery according to local regulations.
6. To reduce the risk of injury or incorrect use of this item, please do not use the product before reading all of the instructions, warnings and maintenance information.
7. By nature, battery heated products can cause burns or discomfort. When using a heated garment, frequently check the skin under the heated areas to avoid burns. Be

8. aware of early warning signs or sensations of burning and remove the heat source before any burns occur.
8. Consult a doctor before using the product on sensitive skin or if you have a medical device affecting the circulation or skin sensitivity.
9. In the rare event that you experience any discomfort or any sensation of overheating during use of any product, immediately stop using it. Take it off and unplug the heated jacket from the battery.
10. It is not recommended for the heating elements to enter into direct contact with the skin.
11. Do not use it if creased or crumpled.
12. When the appliance is likely to be used for an extended period, the settings should be adjusted to the recommended level for continuous use.
13. Do not use damp.

## JACKET MAINTENANCE

1. Disconnect and remove the 6000 mAh/ 5 V battery from the jacket before cleaning.
2. Do not machine wash the jacket. Do not rub the gilet. Hand wash only.
3. Do not tumble dry. Do not iron it and do not dry clean it. Dry flat.
4. Do not plug the 6000 mAh/ 5 V battery into the heated jacket until the jacket is fully dry

## USE

1. Ensure that you use the 6000 mAh/ 5 V battery with a product with lower amperage than the maximum nominal output power of the backup battery. For example, if the 6000 mAh/ 5 V battery has a maximum nominal output power of 2 amperes, then it must not be used with heated products with an amperage of more than 2 amperes. Please check the amperage of your products before plugging in the 6000 mAh/ 5 V battery into the heated jacket. Failing to follow this directive could overheat the battery or the heated jacket and cause damage.

2. The recommended 50% power setting is sufficient for temperatures of approximately 10°C - 18°C, while in the case of lower and more extreme temperatures, adjusting the power to 75% or 100% will provide additional heat. It is not recommended to use the 100% setting for a prolonged period, because this could cause overheating and/or bodily discomfort.

## STORAGE

1. It is important to maintain the 6000 mAh/ 5 V battery charge at least 25% when not in use. Failing to follow this instruction will lead to performance problems or reduce the lifespan of the battery.
2. Do not expose the 6000 mAh/ 5 V battery to temperatures below -20°C or over 60°C.
3. Disconnect the 6000 mAh/ 5 V battery from the jacket when not in use, because even when it is switched off, the jacket will continue to slowly drain the battery supply.
4. Our 6000 mAh/ 5 V battery is very similar to a characteristic mobile telephone battery, therefore please handle with care. Appropriate battery care and storage will ensure that you benefit from its full battery life of more than 500 cycles.

## HOW TO REPAIR YOUR PRODUCT?

Spare parts are available in case of failure or breakage of your battery. Contact your Nature & Découvertes store or visit the Nature & Découvertes website by entering your product reference in the search bar of the site.