


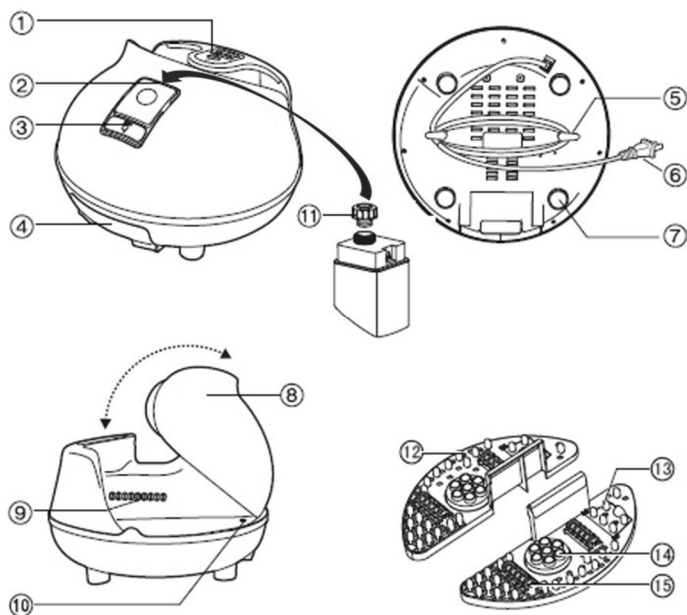

	FR	EN
①	Panneau de contrôle	Control panel
②	Réservoir à eau	Add water tank
③	Bouton de vidange	Drain key
④	Réceptacle d'eau usée	Waste water box
⑤	Rangement du câble électrique	Wire storage device
⑥	Prise	Power plug
⑦	Patins antidérapants	Soft foot pad
⑧	Couvercle amovible	Flexible cover
⑨	Sortie de la vapeur	Steam outlet
⑩	Sortie d'eau	Water leak
⑪	Bouchon du réservoir à eau	Add water cover
⑫	Acupuncture	Acupuncture
⑬	Emplacement pour sachet d'herbes pour bain de pieds	Foot bath bag position
⑭	Masseur	Electric kneading
⑮	Rouleau	Roller

PEDI RELAX ROLL & STEAM

FR



future.

Avertissement : Veuillez lire ce manuel d'instructions attentivement avant d'utiliser l'instrument et le conserver pour une utilisation future.

A. CONSIGNES DE SECURITE

1. Cet appareil est destiné à un usage domestique uniquement. N'utilisez l'appareil que comme indiqué dans ce mode d'emploi.
2. Avant de brancher l'appareil, assurez-vous que la tension électrique de votre domicile corresponde à celle indiquée sur la plaque signalétique de l'appareil.
3. Pour éviter tout choc électrique, n'immergez jamais le câble d'alimentation, la prise ou toute autre partie de l'appareil dans l'eau ou tout autre liquide.
4. Ne laissez pas l'appareil sans surveillance lorsqu'il est branché.
5. Ne manipulez pas l'appareil ni la prise avec les mains mouillées.
6. Débranchez toujours votre appareil après chaque utilisation et laissez-le refroidir avant de le nettoyer, de le ranger ou de le déplacer.
7. Lorsque vous débranchez le câble, tirez-le toujours au niveau de la fiche, ne tirez pas sur le câble lui-même.
8. Lorsque vous utilisez l'appareil, déroulez toujours complètement le cordon d'alimentation de son logement afin d'éviter la surchauffe de l'appareil.
9. N'utilisez pas l'appareil si la prise ou le câble d'alimentation est endommagé, en cas de mauvais fonctionnement, s'il est tombé dans l'eau ou si vous l'avez laissé tomber.
10. Ne tentez jamais de réparer l'appareil par vous-même. Faites-le toujours réparer par un centre de service après-vente ou un centre de réparation qualifié.
11. Le câble d'alimentation doit être contrôlé régulièrement afin d'éviter tout risque de dommages. Si le câble d'alimentation est endommagé, il doit être remplacé par un centre de réparation qualifié afin d'éviter tout danger.
12. Utilisez toujours l'appareil sur une surface sèche.
13. N'utilisez pas l'appareil à l'extérieur.
14. Ne laissez pas pendre le cordon d'alimentation sur le rebord d'une table ou d'un plan de travail, et évitez qu'il n'entre en contact avec des surfaces chaudes.
15. Gardez l'appareil à l'écart des sources de chaleurs comme les radiateurs, afin d'éviter la déformation des parties en plastique.
16. N'utilisez pas de produits nettoyants abrasifs pour nettoyer l'appareil.
17. Cet appareil n'est pas destiné à être mis en fonctionnement au moyen d'une minuterie extérieure ou par un système de commande à distance séparé.
18. Cet appareil n'est pas prévu pour être utilisé par des personnes (y compris des enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou des personnes dénuées d'expérience ou de connaissance, sauf si elles ont pu bénéficier, par l'intermédiaire d'une personne responsable de leur sécurité, d'une surveillance ou d'instructions préalables concernant l'utilisation de cet appareil. Il convient de surveiller les enfants pour s'assurer qu'ils ne jouent pas avec l'appareil.



- AVERTISSEMENT : l'appareil et ses parties accessibles deviennent chauds lors de l'utilisation. Des précautions doivent être prises pour éviter de toucher les éléments chauffants. Les enfants doivent être maintenus à l'écart.

B. CONSIGNES DE SECURITE SPECIFIQUES

1. 2. N'utilisez ce produit qu'à des fins de massage des pieds et non à d'autres fins. Sinon, il peut provoquer des brûlures, des chocs électriques, des blessures physiques ou des problèmes de santé.
2. N'utilisez pas le produit sur des peaux insensibles ou trop sensibles ou présentant une mauvaise circulation sanguine, car ce produit a une fonction chauffante. Il pourrait provoquer des brûlures.
3. Ne le couvrez pas pendant l'utilisation afin d'éviter tout dysfonctionnement ou dommage résultant d'une surchauffe du moteur.
4. Veuillez cesser d'utiliser immédiatement si vous vous sentez mal à l'aise.
5. N'utilisez pas de pièces de rechange non recommandées par les fabricants.
6. N'insérez pas et ne laissez pas tomber d'objets dans les ouvertures (grilles d'aération etc) du produit.
7. Veuillez fermer toutes les commandes opérationnelles avant de déconnecter le produit de l'alimentation si vous souhaitez couper l'alimentation.
8. N'utilisez jamais l'appareil dans une pièce où la température est supérieure à 40°C.
9. N'utilisez pas et ne stockez pas ce produit dans la salle de bain ou dans d'autres endroits humides.
Évitez de placer ce produit à proximité de l'eau (par exemple près d'une baignoire). Sinon, il risque de provoquer un choc électrique ou un incendie en raison d'une isolation réduite.
10. N'utilisez pas ce produit à proximité d'objets inflammables, tels que l'alcool, le diluant, l'essence, le dissolvant pour vernis à ongles, le spray, etc. Cela pourrait provoquer une explosion ou un incendie.
11. Ne mettez pas ce produit dans l'eau. Veuillez utiliser le réservoir d'eau pour fournir de l'eau à ce produit et assurez-vous que l'appareil et l'interrupteur d'alimentation ne seront pas mouillés lors de l'ajout d'eau.
12. Le produit n'est pas fait pour être utilisé par des personnes physiquement ou mentalement faibles (incluant les enfants), sauf sous la surveillance d'un adulte responsable de leur sécurité durant l'utilisation du produit.
13. Les enfants ne doivent pas utiliser le produit. Ils doivent être sous la surveillance d'un adulte pour s'assurer qu'ils ne servent pas du produit comme d'un jouet.
14. Si un son inhabituel est émis du produit, éteignez-le et débranchez-le.
15. N'appliquez pas de crèmes médicales ou cosmétiques sur le produit ou sur vos pieds avant l'utilisation.
16. Les personnes remplissant les conditions suivantes ne doivent pas utiliser ce produit:
 - Pour les femmes enceintes ou les personnes récemment malade.
 - Souffrant d'allergies.
 - Souffrant de problème de circulation sanguine ou de thrombose.
 - Souffrant d'une maladie de peau ou d'infection, dermatite atopique, peau sensible etc.
 - Souffrant de problèmes de peau ou ayant des coups de soleil.
 - Souffrant de lésions cutanées, d'eczéma, d'enflure, etc.
 - Pour les personnes en court de traitement médical ou ayant eu une anomalie physique antérieure étant traitée.
 - Pour ceux ayant des blessures, maladies à la suite d'un accident.
17. Ne vous endormez pas lorsque vous utilisez le produit.
18. N'utilisez pas ce produit lorsque vous êtes ivre ou que vous vous sentez mal à l'aise.
19. Si le produit est utilisé immédiatement après avoir été transféré d'un environnement froid à un environnement chaud, l'accumulation de vapeur d'eau à l'intérieur du produit peut affecter le fonctionnement normal du produit ou même provoquer une défaillance mécanique. Il est suggéré de mettre le produit à température ambiante normale pendant 1 heure avant de commencer à l'utiliser après le transfert.

C. PRECAUTIONS

1. Lorsque vous videz l'eau restante dans le bac à eau après utilisation, tenez l'appareil pour éviter que de l'eau chaude ne se répande sur vos mains. Dans le cas contraire, vous risquez de vous brûler.
2. Utilisez uniquement de l'eau distillée ou purifiée.
3. Lorsque vous actionnez l'interrupteur d'alimentation, ne touchez pas la vapeur. La plateforme de massage amovible doit être placée correctement à l'intérieur de l'appareil avant de l'utiliser, ce qui évite que l'orifice de vaporisation de la vapeur ne brûle la peau.
4. Ne pas incliner, secouer ou déplacer ce produit pendant l'utilisation ou dans les 10 minutes qui suivent. Placez le produit sur une surface plane pour l'utiliser.
5. Ne pas immerger l'appareil dans l'eau pour obtenir remplir le réservoir, utiliser le réservoir d'eau pour ajouter de l'eau.
6. Ne pas retirer le réservoir d'eau pendant l'utilisation.
7. Pendant l'utilisation, ne touchez pas la sortie de vapeur et ne regardez pas dans la sortie de vapeur.
8. Bien que l'appareil soit éteint, de la vapeur chaude continue d'être émise (environ 1 minute). Ne vous approchez donc pas de la sortie de vapeur.
9. Ne secouez pas le corps principal du produit lorsque l'appareil est rempli d'eau.
10. Ne versez pas d'eau chaude à plus de 50 °C pour éviter de vous ébouillanter et d'endommager le produit.
11. Ne pas porter d'ornements sur les pieds lors de l'utilisation du produit.
12. Il est recommandé d'utiliser l'appareil pendant 30 à 40 minutes maximum à chaque fois.

13. - Ne vous asseyez pas sur le produit pour éviter de vous blesser ou d'endommager le produit.
14. - En hiver, veuillez vider l'eau à l'intérieur de l'appareil après utilisation afin d'éviter que les pièces ne gèlent.
15. - Le produit doit être nettoyé immédiatement après utilisation afin d'éviter les maladies de la peau et les infections lorsqu'il est utilisé par d'autres personnes.
16. Ne pas traîner le produit sur le sol ni tirer sur le cordon d'alimentation pour le déplacer, car cela pourrait l'endommager.
17. Une utilisation excessive peut endommager la peau.

Au début, ce produit ne peut être utilisé qu'une fois par jour, 2 à 3 fois par semaine. Après environ un mois, ce produit peut être utilisé une fois par jour. Veuillez adapter la fréquence et la durée d'utilisation en fonction de l'état de votre peau.

- Si des problèmes de peau apparaissent pendant l'utilisation du produit, veuillez arrêter de l'utiliser.

- Un soin de base est nécessaire après l'utilisation du produit. Si vous n'effectuez pas de soins après l'utilisation du produit, cela pourrait entraîner un dessèchement de la peau.

D. UTILISATION

Ce produit a subi un test de fonctionnement utilisant de l'eau avant d'être emballé. Il peut y avoir de petites gouttes d'eau dans l'appareil, qui ne causeront en aucun cas des problèmes de santé.

1) Installation

Placez le produit à plat sur le sol à l'endroit où vous souhaitez l'utiliser. (ne le placez pas en biais, l'eau du réservoir pourra avoir du mal à alimenter l'appareil et il n'y aurait donc pas de vapeur)


Appuyez sur le dessus du réservoir à eau (A) et lorsqu'il ressort (B), tirez le hors de son emplacement.

Ouvrez le bouchon du réservoir et remplissez le réservoir d'eau avec de l'eau distillée ou purifiée (C). Le réservoir plein permet environ 35min de vapeur.

N'utilisez pas d'eau du robinet, d'eau minérale, d'eau géothermale, d'eau de pluie, eau alcaline ionisée, eau acide, cela pourrait endommager le système de l'appareil.

Remplacez le réservoir dans son emplacement (D).


Au fur et à mesure de l'utilisation, le réservoir va se vider. Ne le remplissez pas continuellement, attendez que le voyant lumineux clignote pour vous indiquer de le remplir à nouveau.

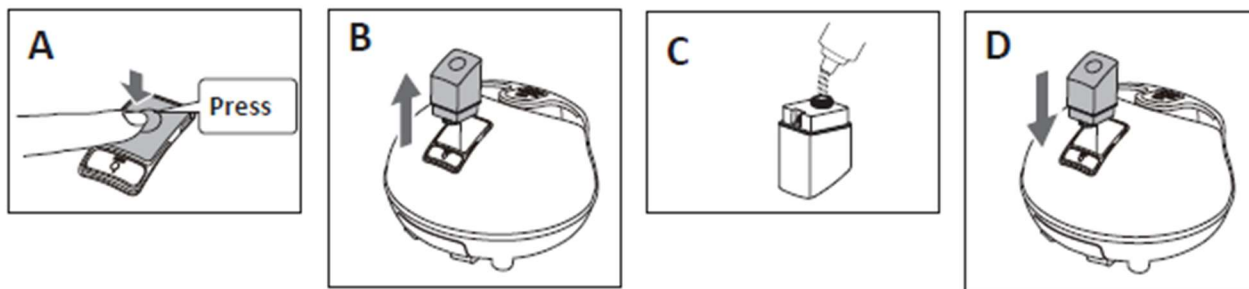

2) Mise en marche

ATTENTION : ne maintenez pas les touches enfoncées, cela pourrait endommager le panneau de contrôle. N'utilisez pas le panneau de contrôle avec les mains mouillées !

- Branchez l'appareil sur une prise de courant.
- Appuyez sur le bouton Marche/Arrêt. L'appareil s'allume et commence à fonctionner..
- Le réglage par défaut est le suivant : [Massage - lent] [Chaleur – intensité 1] [Minuterie - 10 minutes] ; L'indicateur correspondant sur le panneau s'allume.
- Pour modifier la vitesse de massage; appuyez sur le bouton pour passer à une vitesse plus rapide. Le voyant correspondant s'allume alors en rouge. Appuyez à nouveau si vous souhaitez totalement arrêter la fonction massage. Le voyant s'éteint complètement.
- Pour modifier le niveau de chaleur, appuyez sur le bouton « II » pour sélectionner intensité 2 ou sur « III » pour sélectionner intensité 3
- (Le ventilateur continue de fonctionner pendant 30 secondes après l'arrêt de la fonction de chauffage).
- Pour sélectionner le temps d'utilisation, appuyez sur le bouton timer correspondant à votre choix. (10 ou 20 minutes).

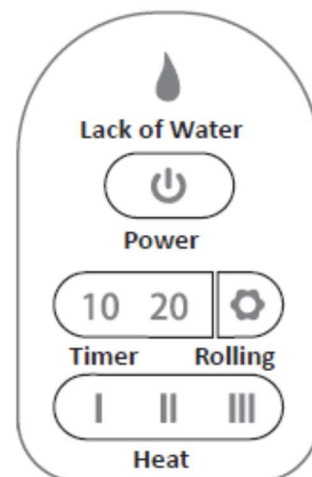

- Appuyez sur le bouton Marche/Arrêt à n'importe quel moment pour éteindre l'appareil pendant son fonctionnement.
- Lorsque la minuterie est écoulee, toutes les actions de massage et les fonctions de chauffage s'arrêtent et passent en mode veille.
- Lorsque le réservoir d'eau manque d'eau, la fonction de chauffage ne peut pas être activée et un signal sonore retentit pour rappeler d'ajouter de l'eau. L'indicateur d'eau clignote pendant 30 secondes, puis s'éteint.
Lorsque la quantité d'eau restante est insuffisante, la méthode d'évacuation de la vapeur change. Il ne s'agit pas d'un dysfonctionnement.
Si le réservoir est totalement vide, la vapeur s'arrête. Veuillez ajouter de l'eau à temps.
- Si vous n'utilisez pas l'appareil, débranchez la prise d'alimentation.

E. CONSEIL D'ENTRETIEN

Après chaque utilisation, débranchez l'appareil.

Votre appareil doit être nettoyé au moins une fois par mois en cas d'utilisation régulière et avant de le ranger et de le stocker (utilisation occasionnelle). Ceci permettra d'éviter le dépôt de calcaire ou de moisissures.

Appuyez sur le bouton de vidange (3) et maintenez le enfoncé jusqu'à ce que toute l'eau soit vidangée.

Retirez le réceptacle d'eau usée (4) et videz l'eau restante. Faites attention à ne pas vous brûler si l'eau est encore chaude.

Laissez sécher à l'air libre.

Remplacez ensuite le réceptacle d'eau usée à son emplacement jusqu'à entendre un petit « clic » de verrouillage.

Retirez les plateformes amovibles de l'appareil et lavez-la à l'eau claire et savonneuse et laissez sécher à l'air libre.

Même après la vidange, il restera un peu d'eau dans l'appareil. Cela ne pose pas de problème d'hygiène car l'eau sera bouillie lors de la prochaine utilisation.

Ne pas laver ou tremper le corps du produit dans l'eau.

N'utilisez jamais d'alcool, de diluant, de benzine ou de dissolvant pour vernis à ongles.





Ces matériaux peuvent entraîner un dysfonctionnement du produit, des fissures ou une décoloration.

Utilisez un chiffon imbibé d'eau savonneuse pour essuyer le corps du produit.

ne pas rincer le corps directement avec de l'eau

ne pas incliner ou renverser le produit pour évacuer l'eau

Rangez le produit une fois qu'il est suffisamment sec.

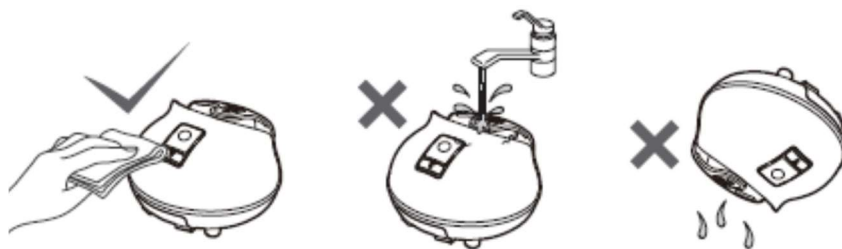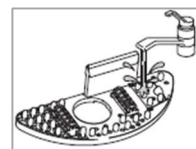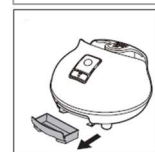



F. PROBLEMES FREQUENTS

PROBLEME	RAISON	SOLUTION
Pas de vapeur	Le reservoir à eau est vide	Remplir le reservoir d'eau
L'appareil ne s'allume pas	La prise n'est pas ou est mal branchée	Vérifier que la prise est correctement branchée.
	L'appareil n'est pas allumé	Appuyer sur le bouton Marche/Arrêt pour allumer l'appareil
L'appareil cesse de fonctionner subitement	La minuterie est terminée (10 ou 20 min)	Reprogrammer l'appareil pour une nouvelle session
	Autre	Vérifier que la prise est correctement branchée

Il est également possible que le joint du bouchon du réservoir à eau tombe lors du remplissage du réservoir.

Dans ce cas, remplacez la tige blanche dans le ressort, et appuyez dans le bouchon du réservoir avec l'index.

Puis appuyez doucement sur le bord extérieur du joint du bouchon (A) sous l'anneau d'étanchéité (B), et alignez les trous des 2 parties.

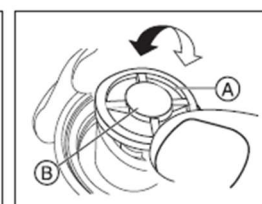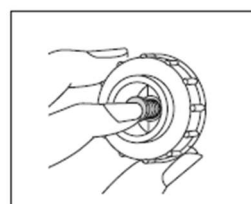

G. CARACTERISTIQUES TECHNIQUES

- Matières : ABS
- Alimentation: AC 220V, 50/60Hz, 450W (câble 200 cm)
- Température : Niveau 1: 42~47°C; Niveau 2: 44~49°C; Niveau 3: 46-51°C
- Durée vapeur : env 30'

Mise au rebut de l'appareil :

La directive Européenne 2012/19/EC sur les déchets des Equipements électriques et Electroniques (DEEE), exige que les appareils ménagers usagés ne soient pas jetés dans le flux normal des déchets municipaux. Les appareils usagés doivent être collectés séparément afin d'optimiser le taux de récupération et le recyclage des matériaux qui les composent et réduire l'impact sur la santé humaine et l'environnement.

STEAM FOOT MASSAGE**EN**

Warning: Please read this instruction manual carefully before using the instrument and keep it for future use.

A. SAFETY INSTRUCTIONS

1. The device is intended exclusively for private and not for commercial use. Only use this device as describe in this instruction manual.
2. Before to use, make sure that the supply voltage corresponds with the voltage marked on the rating label.
3. Do not place any part of this appliance in water or any other liquid.
4. Do not leave the device unattended when plugged in.
5. Do not handle the unit or plug with wet hands.
6. Unplug from the power outlet after use and allow the appliance to cool down completely before to clean it or to move it.
7. When disconnecting the cable, always pull at the plug; do not pull on the cable itself.
8. When using the device, always pull the power cord completely from its housing to prevent overheating.
9. If the cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid an electric shock.
10. Never try to repair it by yourself. It must be repaired by the manufacturer or its service agent or a similarly qualified person in order to avoid an electric shock.
11. The power cable must be checked regularly to avoid damage. If the power cable is damaged it must be replaced by a qualified service center to avoid any danger.
12. Always place your device on a dry surface.
13. Do not use outdoors.
14. Do not let the power cord on the edge of a table or work surface, and prevent it comes into contact with hot surfaces.
15. Keep it away from heat sources such as radiators, to avoid deformation of plastic parts.
16. Do not use coarse or abrasive sponges/cloths or steel wool to clean the appliance.
17. This unit is not designed to be operated by means of an external timer or a separate remote control system.

B. SPECIFIC SAFETY INSTRUCTION

1. Please beware if you are not sensitive to heat because this product has heating function. Otherwise, it may cause burns.
2. Please use this product only for a foot massage instead of other purposes. Otherwise, it may cause burns, electric shock, physical injury or health damage.
3. Please stop using it immediately if you feel pain or abnormality on your skin or body.
4. The following people should not use this product:
 - Women during pregnancy or menstruation.(It may cause skin problems due to hormone imbalance.)
 - People with allergies.
 - People with skin diseases, atopic dermatitis, or sensitive skin.
 - People with skin problems, including dermatitis and severe sunburn.
 - People with skin damage, eczema, swelling, etc.
 There is a possibility of causing skin and physical discomfort.
5. Please hold the plastic shell parts of the power plug and the power cord connector parts to unplug them. (Do not touch any metal parts of the power plug.)
6. When performing maintenance, pull out the power plug. Otherwise, it may cause an accident or even personal injury.
7. Please turn off the power and pull out the power plug when not using this product. Otherwise, it may cause a fire.
8. Please do a regular clean to avoid dust collection on the power plug and the power cord connector. Moisture and other factors may cause insulation failure.
9. Please make sure to use the power cord set dedicated to this product or special power cord components purchased from its manufacturer or repair department for replacement when the power cord assembly is damaged.
10. Make sure to use the special power cord component of this product. In addition, please do not use the power cord set to any other appliances. Otherwise, it may cause a fire.

11. Please wrap the power cord around the bottom of the product when storing it. Otherwise, the power cord may be deformed and malfunction.
12. Please make sure that the operating voltage of this product conforms to its rated voltage.
13. Make sure that the power plug is fully inserted into the household power outlet. Otherwise, it may cause fire, electric shock, burns.
14. Please do not use this product in the following situations.
 - When the power cord or power plug is damaged or becomes hot.
 - When the plug on the household power outlet is loose.
15. Do not damage, modify, excessively bend, pull or twist the power cord.
16. Do not place heavy objects on the power cord, and do not squeeze the power cord.
17. Do not allow pins or dirt to adhere to the end of the power cord connector. Otherwise, it may cause fire, electric shock, short circuit, burns.
18. Please do not plug or unplug the power plug from the household power outlet with wet hands. In addition, do not use this product with wet hands. Otherwise, it may cause electric shock or short circuit.
19. Do not place the product near a stove or in direct sunlight.
20. Do not use or store this product in the bathroom or other humid places.
21. Avoid placing this product near to water (such as near a bathtub). Otherwise, it may cause electric shock or fire due to reduced insulation.
22. Do not let children use this product. Store the product out of touch of children.
23. Do not let children touch the power cord. Otherwise, it may cause burns or electric shock.
24. Do not use this product near to flammable objects, such as alcohol, thinner, gasoline, nail polish remover, spray and etc.. Otherwise, it may cause an explosion or fire.
25. Do not put this product into water. Please use the water tank to supply water for this product, and make sure the appliance and power switch will not get wet when adding water. Otherwise, it may cause fire, electric shock, short circuit or burns.
26. Do not drop or knock this product. If the product is damaged due to dropping or collision, please never use it again. Otherwise, it may cause electric shock or fire.
27. Do not block the steam outlet. For example, please do not insert pins, gold wire or other gold objects or foreign objects to the steam outlet. Otherwise, it may cause an electric shock.
28. Do not modify, disassemble or repair this product by yourself. For maintenance matters, please contact customer service. Otherwise, it may cause personal injury or fire due to abnormal operation.
29. Do not operate the control panel with wet hands or splash water on the control panel. Otherwise, it will cause a failure function.

C. ATTENTION !

1. When emptying the remaining water in the water box after use, please hold the appliance to prevent hot water from spilling on your hands. Pay attention to the high temperature of the water removal box after use. Otherwise, it may cause burns.
 2. Use only distilled or purified water. Otherwise, it may cause equipment failure, and it may cause burns in severe cases.
 3. When operating the power switch, do not touch the steam. The pedal must be placed correctly inside of the product before using the product, which prevents the steam spray port from scalding the skin. Do not tilt, shake or move this product during use or within 10 minutes after use. Otherwise, hot water may be splashed out, or a large amount of steam may be emitted from the steam outlet. Place the product on a flat place for use instead of holding by the hands.
 4. Do not immerse the product in the water to get water, please use the water tank to add water, otherwise, it may cause an accident or product failure.

It is forbidden to install or remove the water tank during use. During use, do not touch the steam outlet or peep into the steam outlet. Though the power is turned off, hot steam will still be emitted (about 1 minute). Therefore, please do not approach the steam outlet.

Except for cleaning, do not shake the product main body when the appliance is filled with water. Do not drain water from the steam outlet. Otherwise, once water droplets accumulated at the steam outlet, hot water may be spilled when the power is turned on. Therefore, it may cause burns.
- Do not pour hot water above 50 °C to avoid scalding the skin and damaging the product.
 - Do not use it for therapeutic purposes.
 - This product is limited to one person, please do not use two or more people at the same time.
 - Do not use this product while drunk or unwell.
 - Do not use immediately after meals to avoid discomfort.
 - Do not wear ornaments on the feet when using the product.
 - Do stop using it immediately and consult a doctor if you feel any discomfort during the use.
 - Do not fall asleep while the product is working.
 - It is recommended to use 30 ~ 40 minutes each time.
 - Do not sit on the product to avoid injury or damage to the product.
 - In winter, please empty the water inside of the product after use to avoid freezing the parts.
 - The product should be cleaned immediately after use to avoid skin disease infection when used by others.

- Do not drag the product on the ground or pull the power cord to move the product, which may damage the product.

This product should not be used by people with physical, sensory or mental disabilities, or those with inexperience and knowledge (including children). A guardian who is responsible for the user's safety must supervise and guide the use of this product. Please prevent children from treating this product as a toy, which may cause danger.

- Please properly dispose of the packaging bag of this product to avoid accidents such as suffocation of infants and young children. Please place it out of reach of children.

- This product should be cleaned after use to avoid the accumulation of grease and other residues.

Warning about skin:

- Excessive use may damage the skin. In the beginning, this product can only be used once a day, 2 to 3 times a week. After about a month, this product can be used once a day. Please adjust the frequency and time of use according to your skin condition.

- If skin problems occur while using the product, please stop using it.

- Basic skincare is required after using the product. If you do not do skincare after using it, it may cause moisture in the skin to evaporate easily, resulting in dry skin.

D. HOW TO USE IT

This product has undergone a strict water operation test before the package. There may have little water droplets in the appliance, which will not cause any health problems.

1) Preparation

Place the product on a flat surface :

- When using, place the body on a flat, solid surface such as the floor.
- When the product body is tilted, the water in the water tank cannot supply water to the product, therefore, steam cannot be released.

Take out the water tank from the product.

- Press firmly on the water tank (image A), and when it pops out, pull out the water tank (image B).





Turn and open the water tank cover.

Pour water into the water tank (image C), and then tighten the water tank cover.

- When filling the water tank, the steam lasts about 35 minutes.

5. Install the water tank to the product (image D).

- Put the water tank into the product body until it has a click sound.
- When the water tank is installed into the product body, it will supply water for the product and the water in the water tank will decrease.

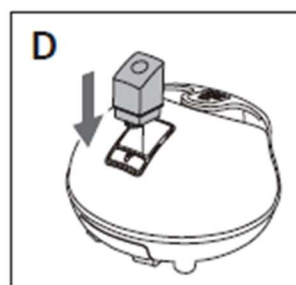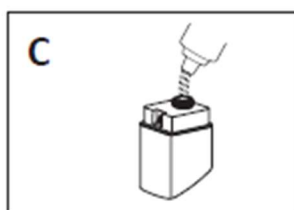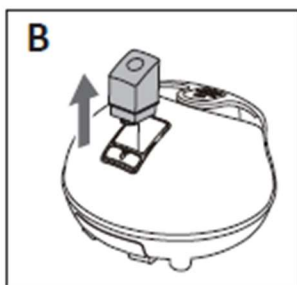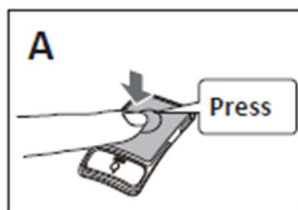

Attention!

- Do not add water repeatedly to the appliance. Add water until the water indicator flash.
- Do not let foreign objects such as dust or dander into the water tank.

Use only distilled or purified water.

Due to different water quality, it may shorten the lifespan of this product. Therefore, we recommend to use distilled or purified water. They are generally available in supermarkets.

The following types of water cannot be used because they contain high minerals.

- Tap water • Geothermal water • Groundwater • Mineral water • Acidic water • Ionized alkaline water

Do not incorporate any other substances.

Do not mix any other substances into the water, such as lotion, aromatic oil, etc.. Otherwise, it may cause burns, malfunction or shorten the lifespan of the product.


2) How to use

Insert the power plug of the product into a household power outlet.

- When the amount of remaining water is insufficient, the steam release method will change. This is not a malfunction.
- If the water in the water tank is used out, steam will be stopped. Please add water in time. Please unplug the power plug if not in use.

2. Press the power button on the operation panel to start the massage.

- This product is controlled by touch keys, and can be operated by touching the position of each symbol on the keys (except the water indicator).

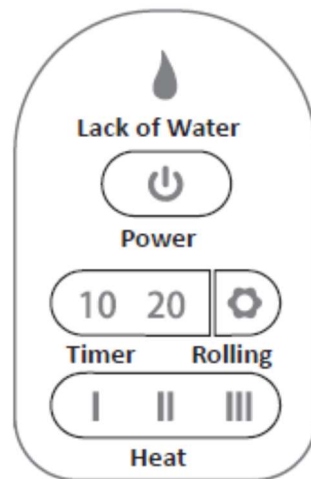

ATTENTION

Do not hold down the buttons for a long time to avoid malfunctions.

Do not operate the control panel with wet hands or splash water on the control panel, otherwise it will cause a fail function.

Power Button

Startup: Press it to turn on the product in standby mode. The default setting is [Rolling Massage-Low Level] [Heat -Low Level] [Timer - 10 minutes]; The corresponding indicator in the panel will be on.

Stop: Press it to turn off the machine during working mode; When the timer expires, all massage actions and heating functions will be stopped and enter into standby mode.

Heat Button

There are three levels heat temperature to choose, which can adjust the suitable temperature. Pressing different buttons to choose desire temperature, and the corresponding light indicator is on. (The fan continues to work for 30 seconds after turning off the heat function)

Rolling Button

The default is low-speed rolling massage speed with green light indicator is on; press the button again to turn the massage speed to high speed, the red light is on; press the button again, the rolling massage function stops and the two-color light turns off.

Timer Button

The default time is 10 minutes. During the timing, press the corresponding 10 minutes or 20 minutes button, and the time will be re-timed. When the time expires, the product is in the standby condition.




Lack of Water Indicator

When the water tank is lack of water, the heat function cannot be turned on and the buzzer sounds to remind of adding water. The indicator of water will flash 30 seconds and then be off.

- When the amount of remaining water is insufficient, the steam release method will change. This is not a malfunction.
- If the water in the water tank is used out, steam will be stopped. Please add water in time. Please unplug the power plug if not in use.

E. CARE AND MAINTENANCE

- Press the power button on the control panel to turn off all functions.
- Unplug the power plug from the household power socket.
- Press and hold the drain key to drain the water in the water tank.
- Pull out the waste water box from the product, and pour out the remaining water. Please pour out the remaining water in the water tank to ensure the product is clean. Otherwise, water marks or odors may be generated. While pressing the drain key, pay attention to the water volume of the waste water box to prevent overflow.
- Pour out the water in the waste water box. Otherwise, water marks or odors may be generated. When pouring water, hold the waste water box and avoid contact with hot water, otherwise, it may cause burns.
- Install the waste water box. Push the waste water box into the product until it clicks.
- Clean the foot pedal. Take the foot pedal out of the product and wash it with clean water.
- Wipe the water above the product body.
- When not using the product for a long time (a few weeks or more time), the water in the water tank and the product body should be completely removed. Store it after the product body is sufficiently dry.

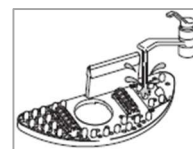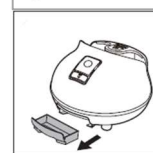

Clean the inside of the product

- Clean once a month.
- In order to remove and prevent scale deposits, the appliance should be allowed to cool for at least 10 minutes after use, and then cleaned according to the following steps.


Wipe the water from the body and water tank.

- Even after draining, there will still be remaining water in the appliance. This will not cause hygiene problems because the water will be boiled when the next time use.

Clean the product body

Do not wash or soak the product body in water.

- Use a cloth dampened with soapy water to wipe the product body.
- Never use alcohol, thinner, benzine or nail polish remover. Those material may cause product malfunction or cracking or discoloration.

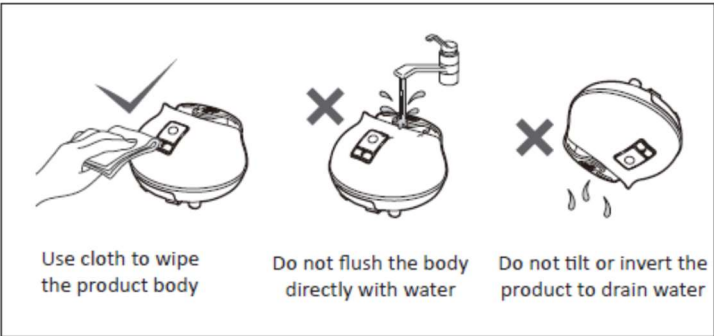


F. PROBLEM SHOOTING

Problem	Possible Reason	Solution
Steam cannot use	The water tank is lack of water	Fulfill the add water tank and install correctly
Product cannot turn on	Power plug is not inserted properly	Check and insert the power plug
	The power button is not on	Press the power button
Product stopped working suddenly	Power off	Check the connection of power plug
	Timer expires	Press the power button and reset time

What if the add water cover’ seal ring fall out ?

Put the sealing column into the spring, and push the index finger into the central part of the water filling cap.
Gently press the outer edge of the water-filling cap seal(A), find the recessed hole under the water-filling seal ring(B), keep the sealing column floating, and insert the seal ring to make the recessed holes match.

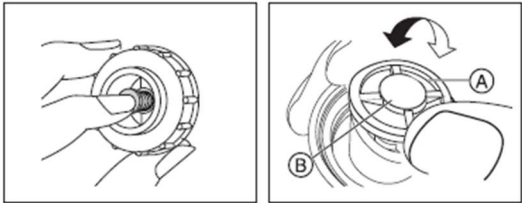

G. FEATURES

- Materials: ABS
- Power supply: AC 220V,50/60Hz,450W (cable 200 cm)
- Temperature: Level 1: 42~47°C; Level 2: 44~49°C; Level 3: 46-51°C
- Steam time: approx 30'.



The European directive 2012/19/EU about electronic and electric waste, requires that you can't throw away defective domestic appliance with common waste. Used device has to be collect separately to optimize the recuperation rate and the recycling of the materials to reduce the impact on the health and the environment.



Importé par / Importiert von / Geïmporteerd door / Imported by :
CAPTELEC, 59170 Croix - FRANCE

